

WIRELESS **PRO**™

AND

WIRELESS **GO II**™

CAMERA SETUP GUIDELINES | GOPRO HERO9/10 WITH MEDIA MOD

RØDE

Before you start

This walkthrough will help you ensure optimal compatibility between your Wireless PRO or Wireless GO II system and your camera, to ensure your audio recordings are clear and clean.

You should connect your receiver to your computer, start the RØDE Central app, and select the preset for the GOPRO HERO9/10 WITH MEDIA MOD to ensure the settings on your microphone match those for your camera.

If you do not have access to RØDE Central, make sure you manually set the gain on your receiver to -24dB using the 'dB' button on the receiver.

Important information


While these settings have been designed to work well in most situations, you should always check your levels manually using the meters on your camera. If you are recording unusually loud or quiet sounds, you may need to adjust the recording level of your camera up or down to get an optimal result.

NOTE: When using the Wireless GO II in very loud situations or with Interview GO handheld adapter, we recommend activating the PAD function in RØDE Central. (The advanced gain functionality in the Wireless PRO means that a PAD is not required.)





STEP 1

Swipe from the left of the rear screen, and select Video Mode

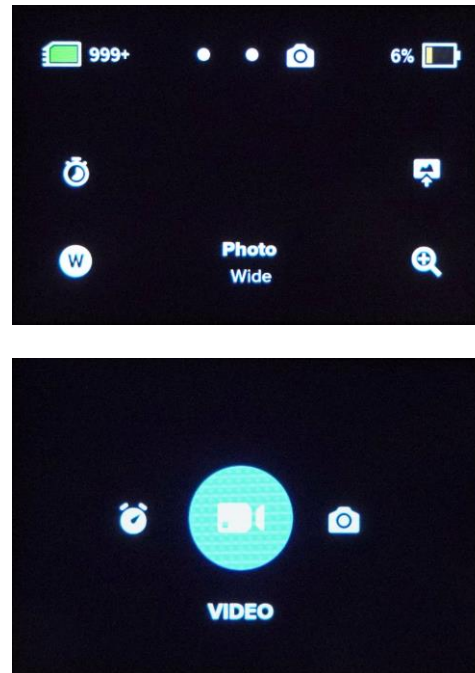


STEP 2

When back on main view, swipe down from top of screen

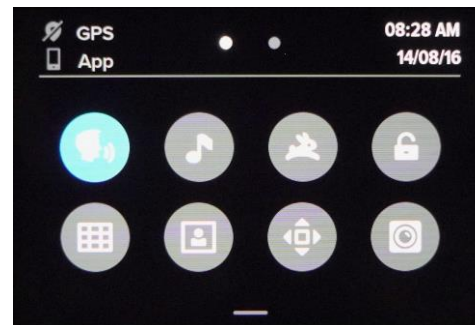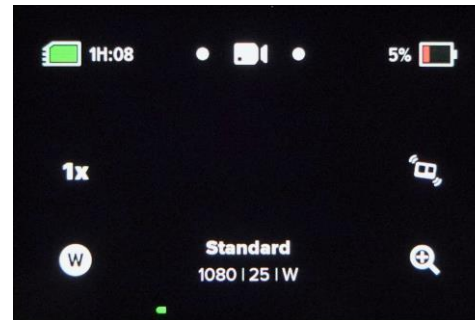


STEP 3

Then swipe from the right, and tap 'Preferences'

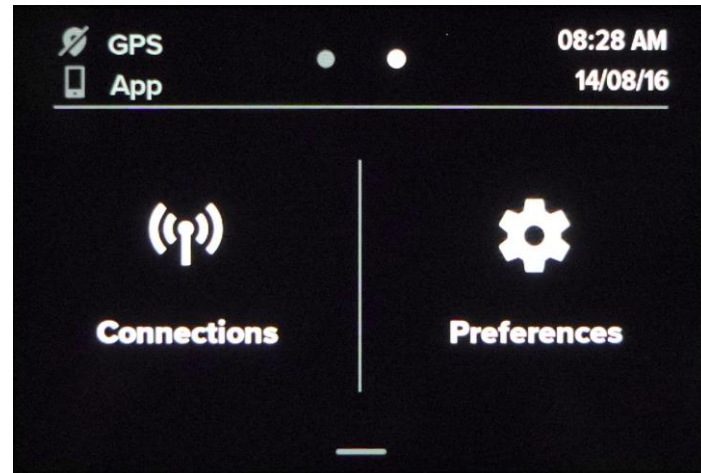


STEP 4

Scroll down, and tap 'Mods'.

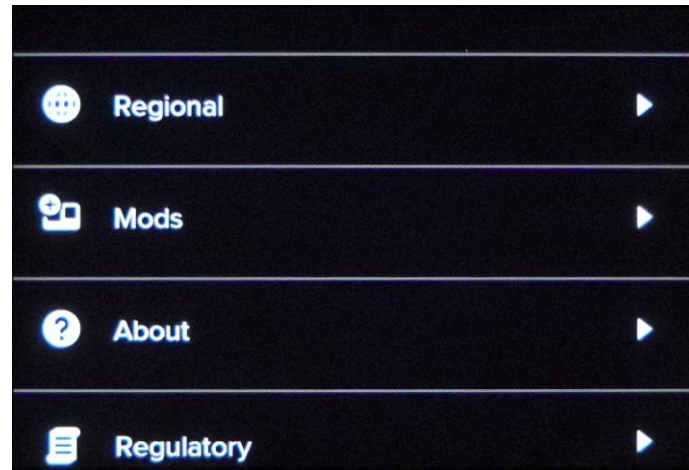


STEP 5

Along Media Mod line, tap microphone option.

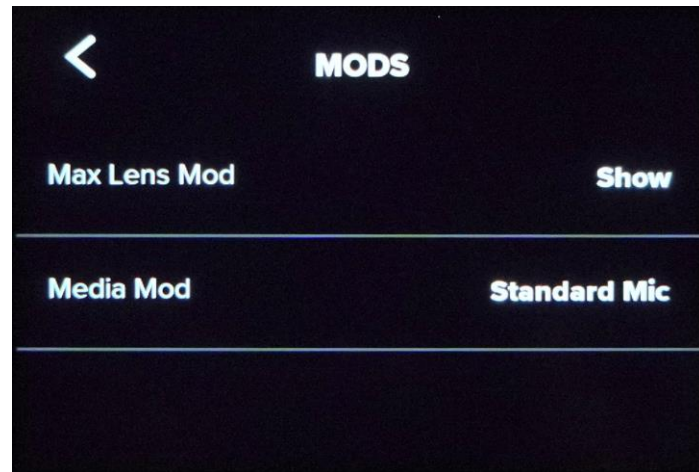

STEP 6

Scroll down to and select 'Powered Mic'.

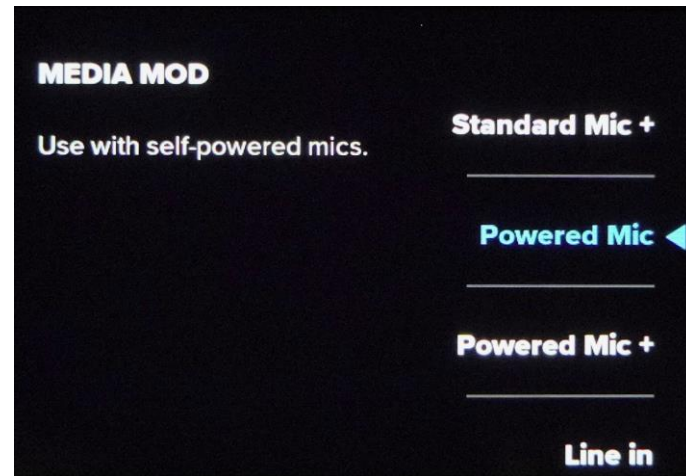

YOU'RE READY TO GO!

Your camera is now set up and ready to go.

Happy filming!

